

# THE GREASE BOX INSTALLATION GUIDE FOR CAMP CHEF GRILLS WITH SIDEKICK ACCESSORY

+ADAPTER WP WITH THE GREASE BOX GX-G (Sold Separately)

## STEP 1:

Remove the Grease Bucket and the SideKick Accessory from the Camp Chef Grill and clean the surface.

## STEP 2:

Attach +Adapter WP (#1) to the Grease Box GX-G (#10) by sliding the adapter into the opening.

Add x3 Screws (#2) in the top opening of the GX-G (#10) and tighten to the +Adapter WP(#1)

Attach Lock (#8) into the Screw hole on desired side of GX-G (#10) in the following order: Shoulder Screw (#6), Plastic Washer (#7), Lock (#8), Plastic Washer (#7). Tighten Screw (#6) to desired swivel.

*Note: The further the Screw (#6) is advanced, the less swivel Lock(#8) will have.*

## STEP 3:

Slide the combined +Adapter WP (#1) with GX-G over the grease spout on the grill.


Place Bolt (#4) through slot openings at the top of the bracket and add Wing Nut (#5) to opposite side. Advance the Wing Nut without fully tightening.

While pushing upwards, tighten x2 Side Screws (#3) to the spout. Rotate between both screws and tighten them evenly to the spout. Make sure the Adapter is FLUSH to the grill.

Once all screws are tightened, fully secure the Wing Nut (#5) and Bolt (#4). The +Adapter WP should not move and will be secure to the grill.

## STEP 4:

Place Top Plate (#11) on the top of the +Adapter WP opening and align with the screw holes. Add x3 Screws (#9) into the openings to secure the plate in place.

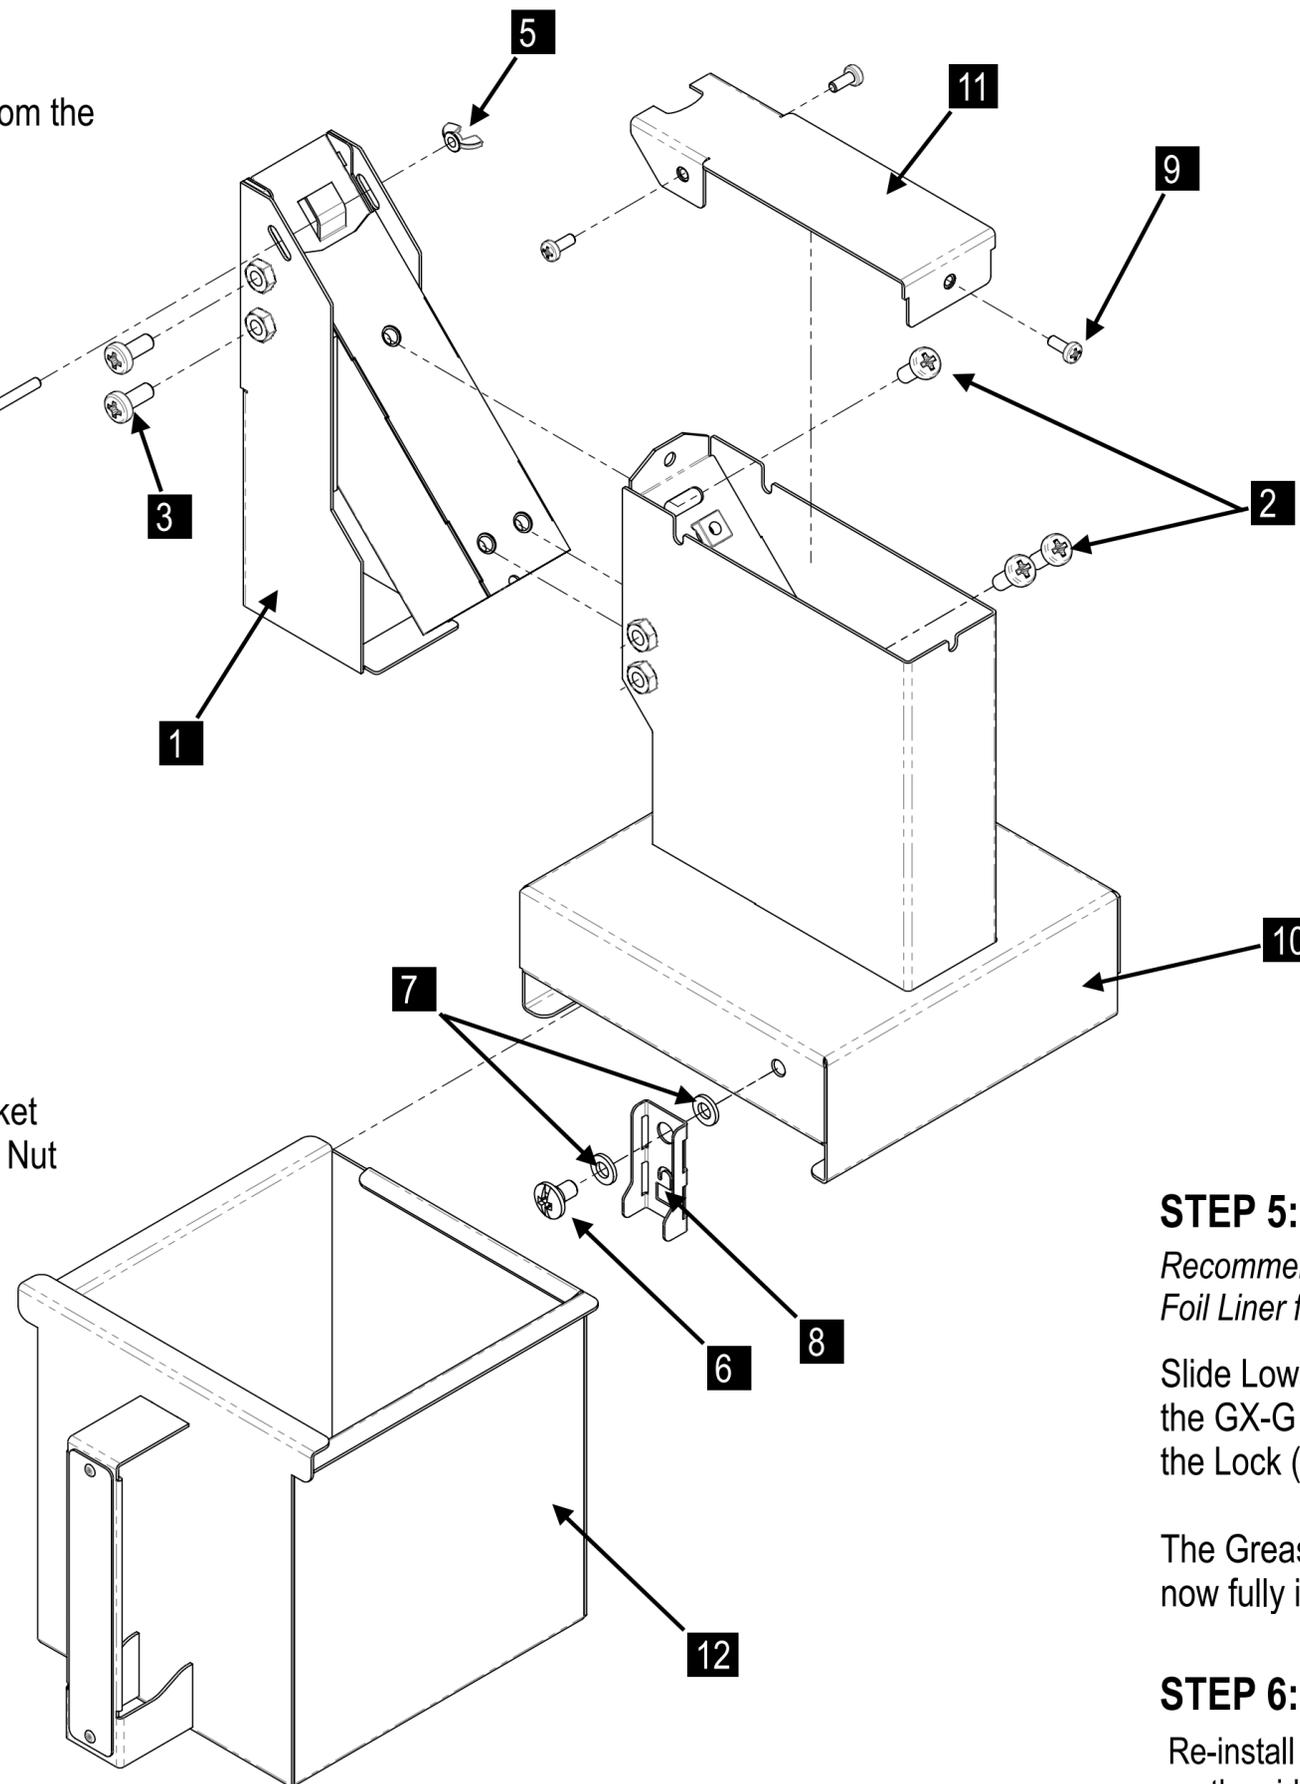

INSTALL VIDEO



## STEP 5:

*Recommended: Add Silicone Box Liner or Foil Liner for cleanliness.*

Slide Lower Bucket (#12) into the rails of the GX-G (#10) all the way back and lower the Lock (#8) into downward position.

The Grease Box with +Adapter WP is now fully installed.

## STEP 6:

Re-install the Side Kick Accessory back on the side of the Grill over the Grease Box.